



Configuration Monitoring Maintenance Support

System IP Wireless Security Wireless Bridge

- > IP Settings
- > DHCP Server Settings

IP Settings

IP Settings ⓘ

DHCP Client	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
IP Address	<input type="text" value="192.168.1.250"/>
IP Subnet Mask	<input type="text" value="255.255.255.0"/>
Default Gateway	<input type="text" value="192.168.1.1"/>
Primary DNS Server	<input type="text" value="192.168.1.1"/>
Secondary DNS Server	<input type="text"/>
Network Integrity Check	<input type="checkbox"/>



Configuration Monitoring Maintenance Support

System IP Wireless Security Wireless Bridge

- > IP Settings
- > DHCP Server Settings

DHCP Server Settings

DHCPv4 Server Settings ⓘ

DHCPv4 Server	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Starting IPv4 Address	<input type="text" value="192.168.0.2"/>
Ending IPv4 Address	<input type="text" value="192.168.0.50"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway IPv4 Address	<input type="text" value="192.168.0.1"/>
Primary DNS Server	<input type="text"/>
Secondary DNS Server	<input type="text"/>
Primary WINS Server	<input type="text"/>
Secondary WINS Server	<input type="text"/>
Lease	<input type="text" value="1"/> days <input type="text" value="0"/> hours <input type="text" value="0"/> minutes



- Configuration
- Monitoring
- Maintenance
- Support

- System
- IP
- Wireless
- Security
- Wireless Bridge

- Basic
 - Wireless Settings
 - Wireless On-Off
 - QoS Settings
- Advanced

Wireless Settings

Wireless Settings

802.11b/bg/ng 802.11a/na

Wireless Mode 5GHz Band 11a 11na

Turn Radio On

Wireless Network Name (SSID)

Wireless On-Off Status OFF

Broadcast Wireless Network Name (SSID) Yes No

Channel / Frequency

MCS Index / Data Rate

Channel Width

Guard Interval

Output Power

- > Profile Settings
- > Advanced

Edit Security Profile

Profile Definition ⓘ

Wireless Network Name (SSID)

Broadcast Wireless Network Name (SSID) Yes No

Authentication Settings ⓘ

Network Authentication

Data Encryption

WPA Passphrase (Network Key)

Show Passphrase in Clear Text No Yes

Wireless Client Security Separation

- > Bridging

Bridging

Bridging ⓘ

802.11b/bg/ng 📶 | 802.11a/na 📶

Enable Wireless Bridging

Local MAC Address

Wireless Point-to-Point Bridge Wireless Point to Multi-Point Bridge

Enable Wireless Client Association

#	Profile Name	Security	Enable
<input checked="" type="radio"/>	1 NETGEAR-WDS-1	WPA2-PSK	<input checked="" type="checkbox"/>



Configuration

Monitoring

Maintenance

Support

System | IP | Wireless | Security | **Wireless Bridge**

➤ **Bridging**

Edit Security Profile

:: Profile Definition ?

Profile Name	<input type="text" value="NETGEAR-WDS-1"/>
Remote MAC Address	<input type="text" value="8C:3B:AD:9B:B3:31"/>

:: Authentication Settings ?

Network Authentication	<input type="text" value="WPA2-PSK"/>
Data Encryption	<input type="text" value="AES"/>
WPA Passphrase (Network Key)	<input type="text" value="*****"/>

:: LDPC Configuration ?

LDPC Status	<input checked="" type="radio"/> Yes <input type="radio"/> No
--------------------	---

NOTE:Disable LDPC if the remote AP is WNDAP350/WNDAP360 for WDS.For more info please read help.