

FileEditViewHistoryBookmarksToolsHelp

BackBestFreakRe: CaN ReplyN WiFiN We veN PrivatN UsersN EX62HowI canN ContaUnablNETGIHowN EX62TroubHc X

https://kb.netgear.com/000037341/How-to-find-the-Extender-WiFi-network-password

Search

WINDOWS 10Mah JonggPrintWhatYouLikeALASKA CRUISERVHOMESEQUIMFAX (Free)AVIATIONCOMPUTERCREDIT MONITORINGDRESDENFUN StuffEpi ClipperZipList Recipe Clipper

NETGEAR

SUPPORTCOMMUNITY

Search

United States (English)

Eileen

NETGEAR Support

How to find the Extender WiFi network password

Was this article helpful? ☒ Yes ☐ No | 22 people found this helpful in last 30 days

To find your Extender's Wi-Fi network password:

1. Use a computer or wireless client that's connected to your Wi-Fi Range Extender via ethernet or wireless connection.

2. Open an Internet browser.

3. In the address bar, type [www.mywifext.net](http://www.mywifext.net).

4. Log in using your Username and Password.

5. Click **Settings** then **Wireless**.

6. Under **General**, look for **WiFi Password**. If it says **Same as existing network password**, it is using the same WiFi password as your main WiFi router. If it says **Use a different password**, it will show the type of password under **Security Type** and the **Network Key**.

This article applies to:

→ [Range Extender AC \(24\)](#)

→ [Range Extender AC Nighthawk \(6\)](#)

→ [Range Extender AX Nighthawk \(1\)](#)

→ [Range Extender AX \(2\)](#)

→ [Nighthawk Pro Gaming \(1\)](#)

→ [Range Extender N \(14\)](#)

→ [WiFi Range Extenders \(4\)](#)

How to Find Your Model Number >

Related articles

• [NETGEAR WiFi Range Extender Frequently Asked Questions](#)

Last Updated:07/30/2019 | Article ID: 000037341

How to find ...

3:05 PM12/14/2020