

Top View

The status LEDs and buttons are located on the top of the router.

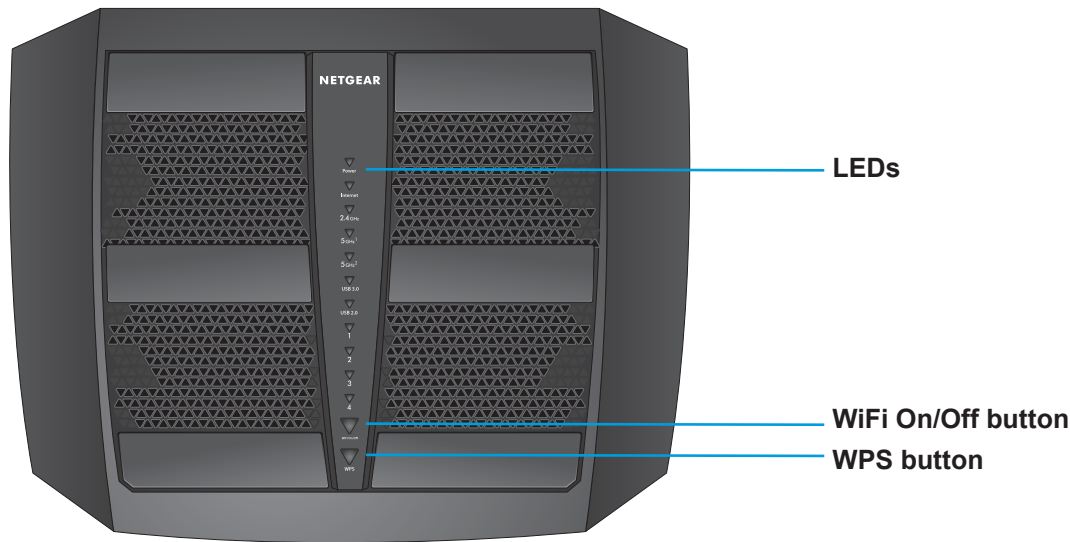







Figure 2. Router LEDs and buttons

Table 1. LED and button descriptions

LED	Description
Power 	<ul style="list-style-type: none">• Solid amber. The router is starting.• Blinking amber. The firmware is upgrading, or the Reset button was pressed.• Solid white. The router is ready.• Blinking white. The firmware is corrupted.• Off. Power is not supplied to the router.
Internet 	<ul style="list-style-type: none">• Solid white. The Internet connection is ready.• Solid amber. The router detected an Ethernet cable connection to the modem.• Off. No Ethernet cable is connected between the router and the modem.
2.4 GHz Wireless 	<ul style="list-style-type: none">• Solid white. The 2.4 GHz WiFi radio is operating.• Blinking. The router is sending or receiving WiFi traffic.• Off. The 2.4 GHz WiFi radio is off.
5 GHz WiFi 1 	<ul style="list-style-type: none">• Solid white. The 5 GHz-1 WiFi radio is operating.• Blinking. The router is sending or receiving WiFi traffic.• Off. The 5 GHz-1 WiFi radio is off.
5 GHz WiFi 2 	<ul style="list-style-type: none">• Solid white. The 5 GHz-2 WiFi radio is operating.• Blinking. The router is sending or receiving WiFi traffic.• Off. The 5 GHz-2 WiFi radio is off.