

ReadyNAS BIOS Update

1. Plug a VGA screen at the back (requires a VGA Port HD15F Adapter to IDC16 12 Inch with Bracket Ribbon Cable Connector)
2. Plug a USB keyboard at the back
3. Plug the Unraid USB stick in the front
4. Tap <delete> when the NAS boots
5. Make the following BIOS updates:
 - a. Disable all Hard Disk Drives, except the Unraid USB stick
 - b. Ensure that Boot Device Priority shows Unraid USB stick
 - c. Set CPU FAN PWM Control to 100 in order to reduce fan noise at startup before Unraid takes over fan control
6. F10 Save and Exit





